

Instructions for installing AWS IOT on Piconium
by Embedded Now, Inc.

- 1) Install a variant of Ubuntu (We use Lubuntu) version 19.04
- 2) After install, update & upgrade
 - a. sudo apt-get update
 - b. sudo apt-get upgrade
- 3) sudo apt install python
- 4) cd ~
- 5) Get the AWS IOT core SDK
 - a. git clone <https://github.com/aws/aws-iot-device-sdk-enabled-c.git> -b release
 - b. mv downloads/* .
 - c. download other aws sdk as needed via git as above in "a"
- 6) cd awsiot/
- 7) chmod +x start.sh
- 8) ./start.sh
- 9) sudo apt install curl
- 10) sudo ./start.sh
- 11) cd aws-iot-device-sdk-python-master/
- 12) cat README.rst
- 13) python -V
- 14) sudo python setup.py install
- 15) sudo apt install node.js
- 16) cd samples
- 17) cd awsiot/
- 18) sudo ./start.sh